



The **Visser-Rowland Organ** is a 19-rank, mechanical key and stop action organ over three manuals. The middle manual (Hauptwerk) is exposed with controlling stops on the right; the top manual (Brustwerk) is enclosed with controlling stops on the top left; the Pedalwerk is exposed with controlling stops on the lower left. The bottom manual is a permanently coupled manual combining both BW and HW divisions. Two hitch-down couplers on toe levers couple the HW and BW to the Pedal. The Zimbelstern is the one reversible toe-stud on the organ. The tremulant affects both HW and BW stops. The organ stoplist follows:

<u>Hauptwerk</u>		<u>Brustwerk</u>		<u>Pedal</u>	
Prinzipal	8'	Gemshorn	8'	Subbass	16'
Rohrflöte	8'	Celeste (TC)	8'	Prinzipal (Hw)	8'
Oktav	4'	Kleingedeckt	4'	Gedeckt	8'
Waldflöte	2'	Prinzipal	2'	Oktav (Hw)	4'
Sesquialtera	II*	Larigot	1 1/3'	Fagott	16'
Mixtur 1 1/3'	IV	Rohrschalmel	8'		
Trompet	8'	(<i>expressive</i>)			
Tremulant					

* *double-draw* (half-way=2 2/3'; full-way=2 2/3' & 1 3/5')